




# SCHLAGE DEADBOLT INSTALLATION INTRUCTIONS

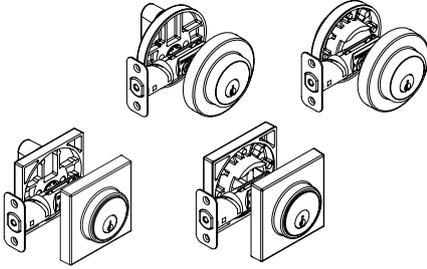


## 1. SAFETY INFORMATION

Read the precautions and instructions in this manual before installing and using this lock. Save this manual for future reference.

**WARNING** If the door needs to be drilled, be familiar with how to use your drill safely and understand all the door preparation steps before proceeding.

**NOTE** To ensure a long lasting finish, remove the locks, or do not install the locks, prior to painting your door. Periodically clean locks with mild soap and a soft cloth. Do not use abrasives or harsh chemicals and avoid sharp or scratching objects.

## 2. TOOLS REQUIRED / HARDWARE INCLUDED


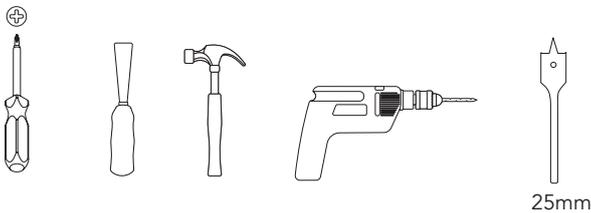


Part	Description	Quantity
AA	Mounting Screws	2
BB	Latch/Strike Plate Screws	4
CC	Mounting Screws	2



NOTE Not to scale.


Part	Description	Quantity
A	Key	2
B	Exterior Assembly	1
C	Deadbolt Latch	1
D	Interior Assembly	1
E	Faceplate	1
F	Strike Plate	1

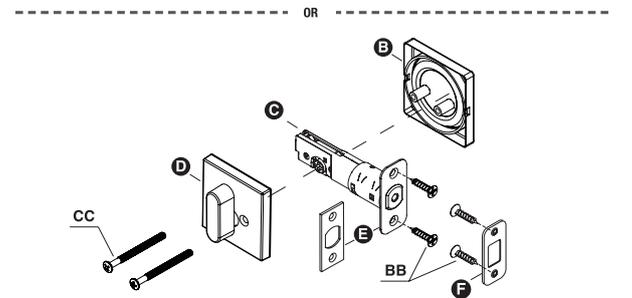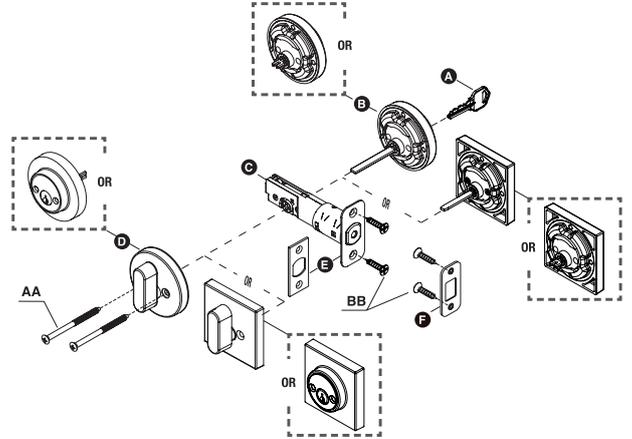


## 3. DOOR PREPARATION

NOTE If your door already has holes, skip to step 4 for installation

**3.1** Using the template over the page, mark the door, drill holes, and chisel out a mortise. Drill from both sides to avoid wood splitting.

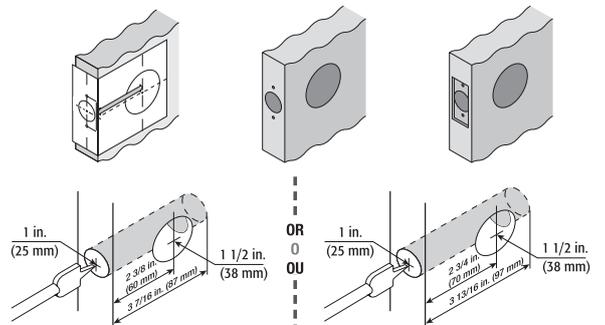

**3.2** Prepare the door jamb - using the strike plate as a pattern, drill the latch and screw holes, and chisel out a mortise until the strike plate fits flush. To assure proper lock function, the holes in the door jamb must be drilled 28mm deep.



# TEMPLATE

Drill a 1" (25 mm) diameter hole at the center of the door edge.

Fold here.  
Place on the door edge.

Ø 2-1/8" (54 mm)  
Ø 1-1/2" (38 mm)

**NOTE:** Double check your product for the correct hole sizes.

1-3/4" (45 mm)    1-9/16" (40 mm)    1-3/8" (35 mm)


Backset 2-3/8" (60 mm)

Backset 2-3/4" (70 mm)

## 4. INSTALLATION


### 4.1 INSTALL THE LATCH

A) Attach the correct faceplate

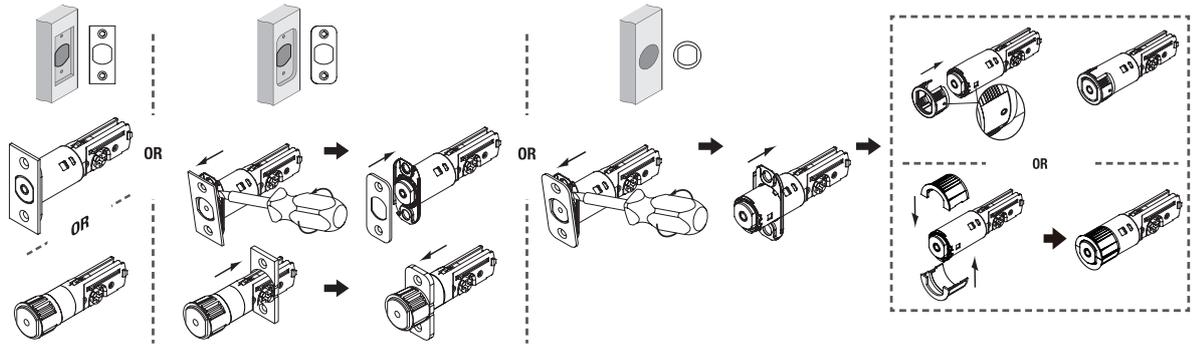


B) Set the latch backset

**CAUTION** Be sure the latch cam is upright before making any backset adjustment.

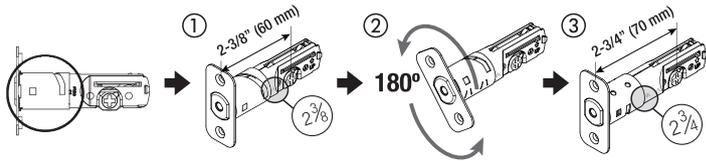


C) Install the latch

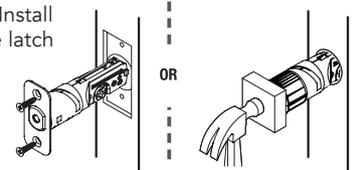


### 4.2 INSTALL THE CYLINDER DEADBOLT


Single cylinder deadbolt

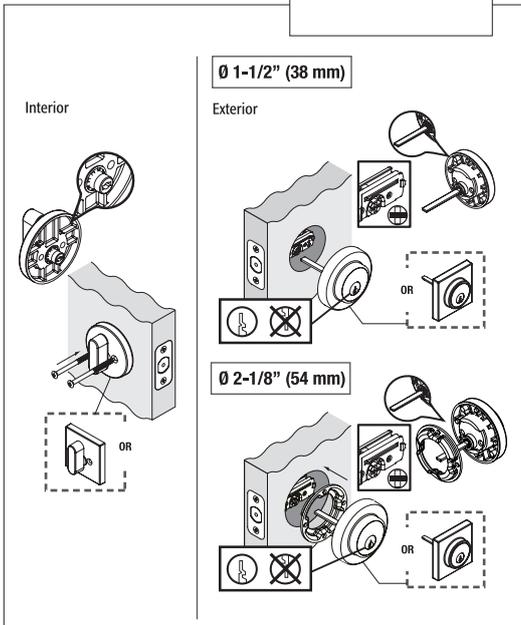


Double cylinder deadbolt

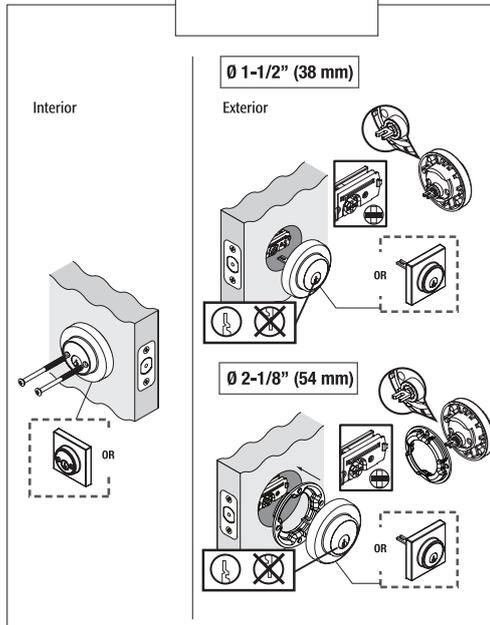

Thumbturn inside and plain rose outside

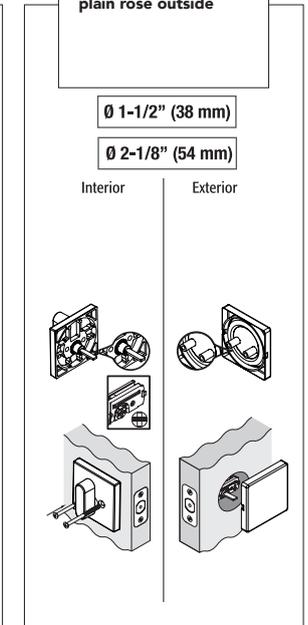

### 4.3 INSTALL THE STRIKE PLATE

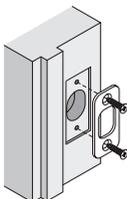

Allegion (Australia) Pty Ltd  
Freephone 1800 098 094  
Email info.au@allegion.com  
[www.allegion.com.au](http://www.allegion.com.au)

Allegion (New Zealand) Pty Ltd  
Freephone 0800 477 869  
Email nzinfo@allegion.com  
[www.allegion.co.nz](http://www.allegion.co.nz)

