



Step 1.

- Mark the Door as shown and use the template as guide.

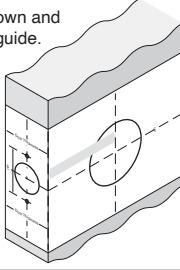


Step 2.

- Drill the holes as shown.

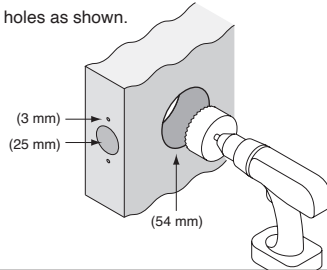


Step 3.

- Prepare rebate
- Install the latch and screw to tighten.

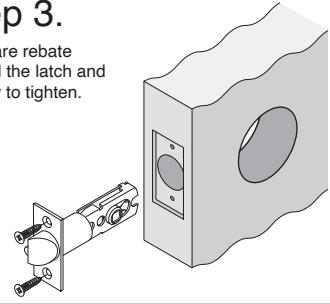


Step 4.

- Prepare rebate
- Install the strike and screw to tighten.

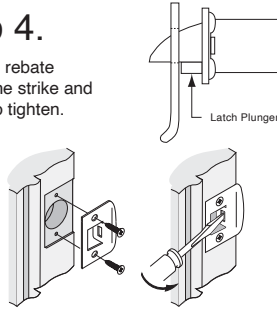


Step 5.

- Installing the Knob/Lever

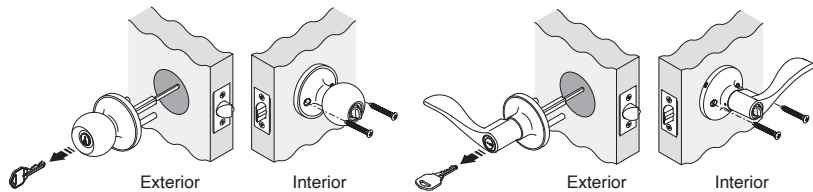


Switching the Handles (if Required)

Note: Levers installed in reverse will not affect the product's performance.

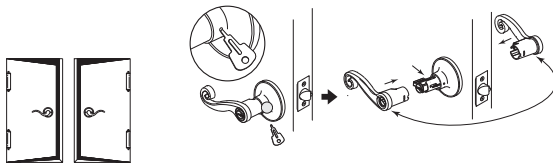

Adjustable Latch



NOTE: Carefully follow these instructions when installing.
Screws to be tightened to a recommended 2.5Nm torque.



Mark centre-line of latch hole

FOLD HERE

Fit here on door edge

54mm hole

BACKSET 60mm (2 3/8")

BACKSET 70mm (2 3/4")

Fit here on door edge

Installation template for knob/lever lockset



ALLEGION

schlage.co.nz

PDGA0037 MAY 19
LGA-000SBA12-03

