





# 991MF Mortice Lock Installation Instructions

## Handing Guide

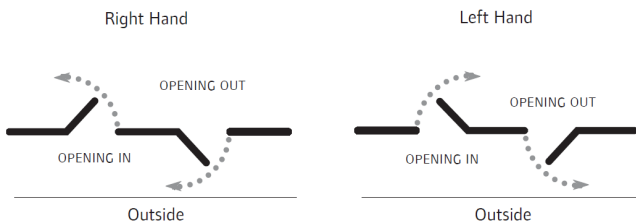

## To Reverse Bolt

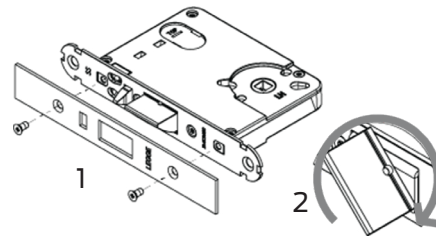

1. Remove outer forend.
2. Pull and rotate bolt 180° clockwise.

## 991MF Handing/Function Adjustment

### V Series handing adjustment (Inside handle free)

#### To set for left hand

Push in and turn clockwise.  
Set adjuster as shown.

#### To set for right hand


Push in and turn anti-clockwise.  
Set adjuster as shown.

#### V9/V55


The Locking Bar must be down before  
installing.

### To set for C Series (Both handles lockable)


Set adjuster as shown.

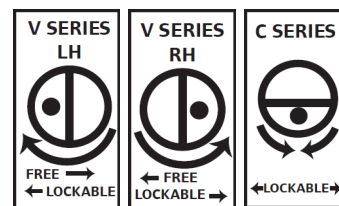

Install provided Anti-lockout screw, when  
used in conjunction with the 9A Adaptor.

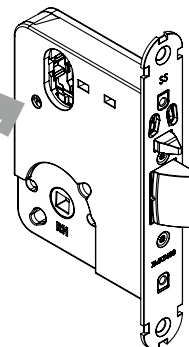

Anti-lockout screw

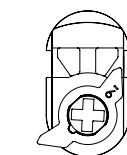

9A Adaptor




Allegion (Australia) Pty Ltd  
Phone 1800 098 094  
Website [www.allegion.com.au](http://www.allegion.com.au)

Allegion (New Zealand) Limited  
Phone 0800 477 869  
Website [www.allegion.co.nz](http://www.allegion.co.nz)

03/2023

## Mortise Instructions

1. Cut mortise slot using template for correct size.
2. Fit lock into mortise, scribe around forend and remove wood to allow flush fit to door.
3. Remove lock and use template to mark and drill holes to suit lock and furniture being used.

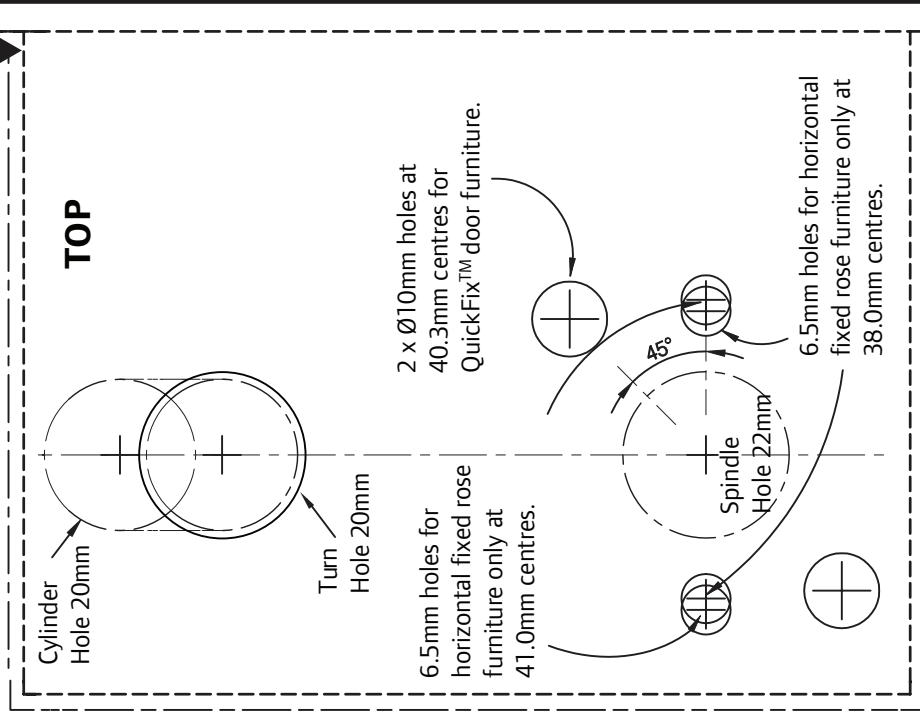

**CHECK CAREFULLY:**  
DO NOT DRILL HOLES RIGHT THROUGH DOOR. THE FURNITURE MAY NOT COVER ANY HOLES THAT ARE INCORRECTLY DRILLED.

