




500 & 700 Series Furniture Installation Instructions

Fit lock/latch as per fitting instructions, with a 22mm spindle hole to allow for rotor clearance.

When fitting plates they must be kept square with the door edge, otherwise the lock plate will not fit over the cylinder.

It is very important that holes are drilled squarely. Failure to do so will lead to difficulty in lining up the tapped holes in the plate. The following method is recommended:

- A** Place the plate with countersunk holes on the lock spindle. Make sure the plate is parallel with the door edge and spot through the screw holes onto the door.
- B** Use the same plate and repeat on the other side of the door.
- C** Drill 6.5mm holes half way through the door and repeat on the other side of the door with the holes meeting in the middle of the door.
- D** To avoid cutting the screws too short, fit screws through the countersunk plate and the door, leaving 5mm protruding for fixing.

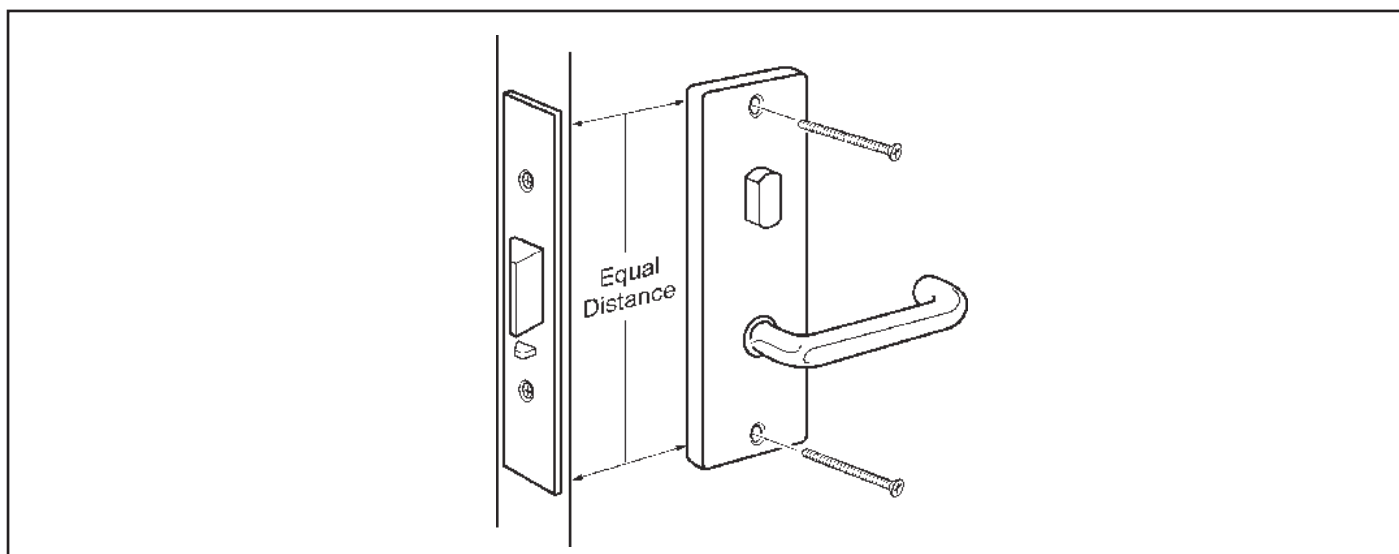

Allegion (Australia) Pty Ltd
Phone 1800 098 094
Website www.allegion.com.au

Allegion (New Zealand) Limited
Phone 0800 477 869
Website www.allegion.co.nz

12/2013

