

Form Series

Furniture Set

Horizontal fixing with ME60, 990
and other Mortice Locks

INSTALLATION INSTRUCTIONS

Box contents

- Rose & lever set – contains 2 factory fitted barrel nuts
- 2 fixing screws
- Jig template

Door thickness


- Latch furniture - 30mm to 55mm

Tools required

- Tape measure
- Pencil
- Level
- Drill
- Drill bits – 4mm & 8mm
- Spade bit – 25mm
- Screwdriver (Phillips)


1. DOOR PREPARATION

After installing the lock, line up the centre of the jig with the mortice lock spindle hole.

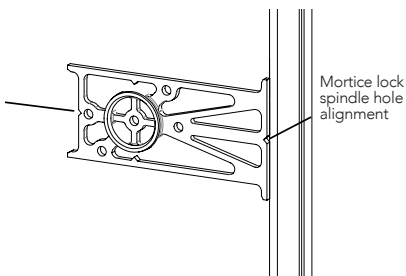


2. DRILL SPINDLE HOLE

With the jig in position, mark and then drill Ø25mm spindle hole from both sides of the door.

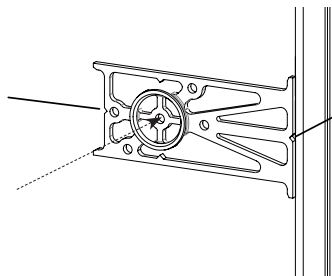


3. DRILL HOLES

Position jig within the drilled spindle hole. Mark 2x horizontal holes. Drill pilot holes Ø4mm from both sides of the door. Re-drill Ø8mm holes from both sides of the door.

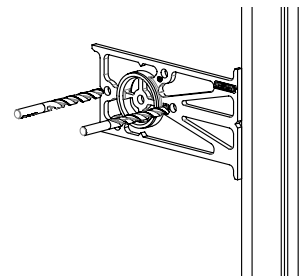

4. ASSEMBLY

Cut screws to suit door thickness, $L = D + 8\text{mm}$. Install furniture, fixing with adjusted screw lengths and pre-installed barrel nuts.

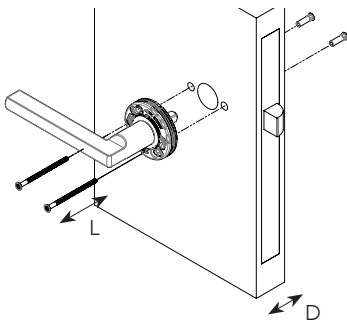

5. FINISHING

Tighten screws, add anti-rotational screws (required for commercial applications - Form Series) and fit rose cover.

