


Installation Instructions for Sliding Cavity Door Lock

Passage Set


Step 1. Door Preparation

- Fold template where indicated.
- Position template on door edge at desired latch height.
- Firmly hold template and mark pull tab plate height and escutcheon hole centre at required backset. (refer template).
- Measure door thickness and mark centre.
- At required backset drill pilot hole


 suggested size 3mm (1/8").
- Enlarge hole to 54mm (2 1/8") as required, drilling from both sides of the door.

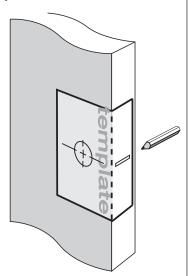

Step 2. Pull Tab Plate Installation

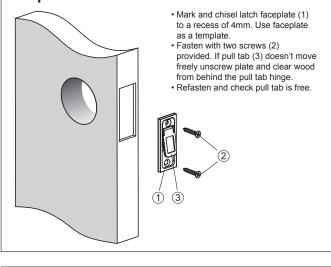

Step 3. Final Assembly

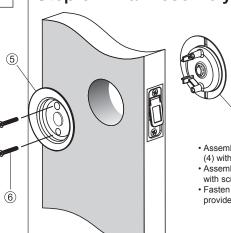



- Assemble to internal escutcheon with screw holes to the door (5).
- Fasten escutcheons with screws (6) provided.

Fit here on door edge

Note: Installation instructions also apply to Square Sliding Cavity Door Passage Set

of latch hole

of latch hole

FOLD HERE

Fit here on door edge

54mm (2 1/8") hole E: Carefully follow these instructions when installing.

Do not overtighten screws. Use of power drill is not recommended.

NOTE:

2002

Exploded Diagram

